



Bird Control Australia – Indoor Bird Laser Repeller



Set up and installation

Bird Control Australia Indoor Laser can be operated with 220V or 240V power supply. It comes with a 1m power cord, 2 keys, remote control, mounting hardware (hanging bracket) and an instruction manual. Unpack carefully and be sure that no damage has occurred during shipping. If anything is missing or appears to be damaged, please contact us.

Power Connection: This unit has been designed to function on a main power supply of either 220V or 240V and has been supplied with either a 220V or 240V power plug for use with your local voltage. *Use only the plug and power adapter supplied with the unit. Ensure you are using a grounded circuit. Ensure your source voltage matches the required voltage for your Laser before plugging it in. When connected to the mains power supply the power LED will be on and the laser will begin to warm up and then function.

For remote control use including timer, see below.

Housekeeping is very important! In any good Bird Management Program, the problem area should be cleaned of all evidence of birds. Nests, fledglings, droppings, dead birds, and the residual scent should all be removed. Check the area for unusual incentives. Remove food spillage, garbage, nesting materials and other items that may be appealing to birds.

In particularly stubborn and/or long-term infestations, it may be necessary to consider a combination approach to further decrease the desirability of the facility to birds. The use of multiple products in synergy or combination will particularly help with long term infestations. This process has proven to maximize the effectiveness of bird control programs.

Installation/Mounting: Mount the Laser right side up SO IT IS LEVEL HORIZONTALLY (do not mount to a vertical or diagonal surface). Mount it properly using the mounting bracket supplied. Use in a well-ventilated area. Do not block any ventilation slots. If desired, block unwanted beams (the beams that would normally point down, for example), by adjusting the thumbscrews on the metal “door” covers on the front aperture.

Laser Automatic Cycling: The Laser has been pre-programmed to prevent acclimation of the pests to an unchanging stimulus. This consists of a cycle of ON / OFF operation with intervals varying between 5 and 15 minutes OFF time for every 5 minutes ON. This cycle will be maintained as long as the Laser is in operation.

First Time Use:

To turn on the Laser:

1. Put the key in and turn it clockwise, to the right.
2. Use the power switch to turn the Laser on. You will hear the fan turn on, then you will see the coloured fat beam laser lights begin, they're constantly moving and changing display.
3. The remote control may be used to turn the unit off and on, and also to operate for specified durations (2,4,6 or 8 hours). One remote will control multiple units (within its coverage range – if units are mounted at a distance from one another, the remote must be activated close enough to each unit for the signal to reach it.)

Remote Control & On-Unit Control including Timer Operation:

The unit operation can be controlled in a number of ways: Direct or Remote Control. The unit may be switched on and off using the remote control provided. The effective receiving distance of radio frequency remote is about 20m. Pull out the antenna for best results in case of longer distance or intervening obstacles.

Timed operation (using the remote control):

Insert battery into Remote Control unit before first use. For longer life, remove the remote battery when not in use for long periods. NOTE: Remotes are not specific to individual laser units. One remote will operate all lasers within receiving range.

To use the timer, press the remote's TIMER ON button. Unit will flash twice to show it has received the signal. Pressing the TIMER ON button defaults to 2 hours of operation. To select a different duration, press the desired hour button following Timer START. To cancel timer operation, press the TIMER OFF button. Unit will flash twice to show it has accepted the signal.

Use with Appliance timer:

To do this, turn the unit on at the switch only. (Do not use the remote) and allow the appliance timer to control the ON OFF times.

To prolong the life of the unit, allow 30 minutes cooling after 6 - 8 hours of operation.

CARE/CLEANING:

Cleaning frequency depends on the environment. During cleaning (except for mirrors), or when the unit is not in use, close the aperture completely by using the thumbscrews to prevent dust. Unplug the unit. Use a soft cloth to clean the outside casing. To clean mirrors (inside the front aperture) use a cotton swab and rubbing alcohol. Twirl slowly and press

gently to avoid damage. Be sure all parts are dry before plugging the unit back in. When unit is not in use for extended periods, turn off and remove the key in the back. This will reset the unit for next operative cycle as well as providing additional security preventing unauthorized use.

SPECIFICATIONS

Laser Power: 4.9mW RED+4.9mW GREEN

Power Consumption: 50 watts

Laser Colour: Red + green

Net Weight: 1.5kg Power: AC100-240V,50-60Hz Electric Current: 100mA

Classification: CLASS 3R

Size (mm): L(18.5)*W(14.8)*H(7.0) CM

Fuse: 2A

Beam Divergence: 60° Operating

Temperature: 0°C-40°C

Safe Temperature for Use: 0°C-35°C Origin:

Made in China



COVERAGE/VISUAL DISTRIBUTION PATTERN: Total spatial coverage is dependent on environmental surroundings: more visible in the dark than in the light, more visible in a relatively open area than one with many bushes or trees that would block beams, etc. This laser beam has a maximum range of 100 meters in the dark. Maximum coverage is approximately 900 square meters. Keep in mind that this is unidirectional coverage, with beams emanating from the aperture in the shape of a slice of pie. Angle of spread = 30 degrees maximum either side from centre (60 degrees total). Depending on placement, a second unit will offer increased synergistic coverage, therefore multiple units are strongly recommended, especially in stubborn or long-term infestations.

PRECAUTIONS

This laser is Class 3R.

- Never look directly into laser beams, or into the specular reflection(s) of any beam. Wear safety goggles to protect your eyes when necessary.
- DO NOT point towards other people.
- DO NOT direct laser beam up into the sky AT ANY TIME. Significant disruption to safe airplane operation may result, punishable by law.
- Wear antistatic wrist strap while servicing to prevent electrostatic damage.
- Do not spill liquids into or onto unit. If this happens, disconnect the power immediately.
- Power directly off of a switched circuit.
- Disconnect unit from main power before inspecting, installing, making any type of connection, or replacing any components.
- Locate this unit with adequate ventilation, at least 15 cm from a wall, and mount in a safe, stable manner.
- To prevent fire or shock hazard, do not expose this unit to a high temperature or high humidity area. Unplug unit when not in use.

- Keep combustible materials away. Do not place unit in or near water. Do not mount while standing in or surrounded by water.
- Mount at or above a height of 3 meters. Project beams above eye level. Do not project beams onto specular (reflective) material – for example, mirrors.
- Do not project beams at room entrances.
- Use indoors only. Outdoor use voids all warranties.
- Do not use near humans or pets.
- Conform to temperature ranges in “specifications”. Diode laser is extremely sensitive to temperature, and output power is indirectly proportional to temperature. If temperature is too low, laser may need extra time to warm up to optimum output. If temperature is too high, turn up air conditioning. If temperature remains too high, it can cause damage or degradation to the diode and the long-term performance.
- Refer service to a qualified technician.

