



# Bioacoustics MK2

## User Manual – V1.0

# Introduction

Congratulations on your purchase of the Birdzout Bioacoustics MK2.

These units are designed to deter pest birds by playing a range of biologically relevant deterrent sounds, targeting the problem species of birds.

Please read through the instructions in this user manual carefully before operating.

## User Manual Contents:

1. Package Contents
2. Safety Warnings
3. Installation Instructions
4. Programming Instructions
  - 4.1. App Download Instructions
  - 4.2. Connecting App to Bioacoustics Unit
  - 4.3. Timer Setup
    - 4.3.1. Timer On/Off Setting
    - 4.3.2. Sound Library Selection
    - 4.3.3. Delay Settings
    - 4.3.4. Sound Library Settings
5. Specifications

## 1. Package Contents:

- 1 x Bioacoustics Speaker Unit
- 1 x Mounting Bracket
- 4 x M8x20 Bolts
- 1 x Mains Power Adapter
- 1 x Battery Lead Kit
- 1 x Power Lead Adapter

## 2. Safety Warnings

Caution! The Birdzout Bioacoustics MK2 Unit is capable of producing sounds up to 120 decibels at 1 metre. Proper hearing protection must be worn if within 50 metres of the unit, when operating.

### 3. Installation Instructions

Determine the best mounting position for the Speaker unit. The unit is ideally positioned as close to the problem area as possible and mounted up a minimum of 2 metres above the height of the problem area.

Mount the speaker unit to the top of the mounting bracket using the M8 Bolts. (requires a 13mm socket or spanner)

Attach the mounting bracket to the side of a timber or metal post using suitable fasteners and ensuring there is no risk of the unit becoming unstable.

Connect the power adapter or battery lead kit and adapter cable to the speaker unit to power on the device. Attach the antenna

### 4. Programming Instructions

 
#### 4.1. App Download Instructions

Search Google Play (Android) or the App Store (iOS) for Birdzout. (or scan the QR Codes on the Back Page) Select and Install the Birdzout App.

#### 4.2. Connecting App to Bioacoustics Unit

- Ensure Bluetooth is switched on.
- Open the Birdzout App.
- Press "Birdzout Bioacoustics MK2".
- Press "Scan for Devices".
- Select "Birdzout Bioacoustics MK2"
- Enter the Access Pin Code (default is 0000)

If the unit currently has a timer set, it will display the current sound library and settings selected on the home page


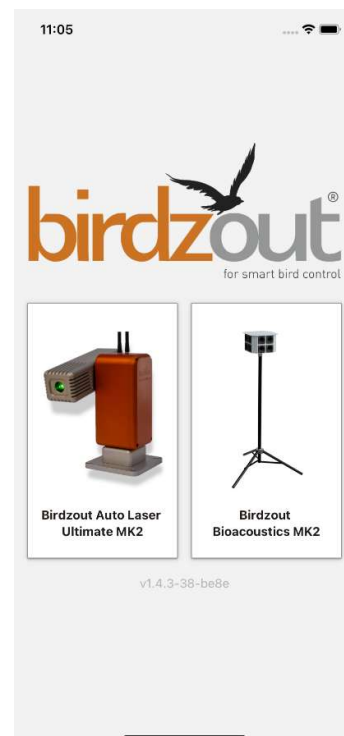


### 4.3. Timer Setup

To access the timer setup function, press the “Setup” Button  
This will displace a list of 10 timers that are available to be set.  
Any timers that have been set previously are displayed as orange. If not set, display as grey.

To disable all previously set timers, press the “Disable All Timers” Button

  To reenable, press the “Enable All Timers” Button.

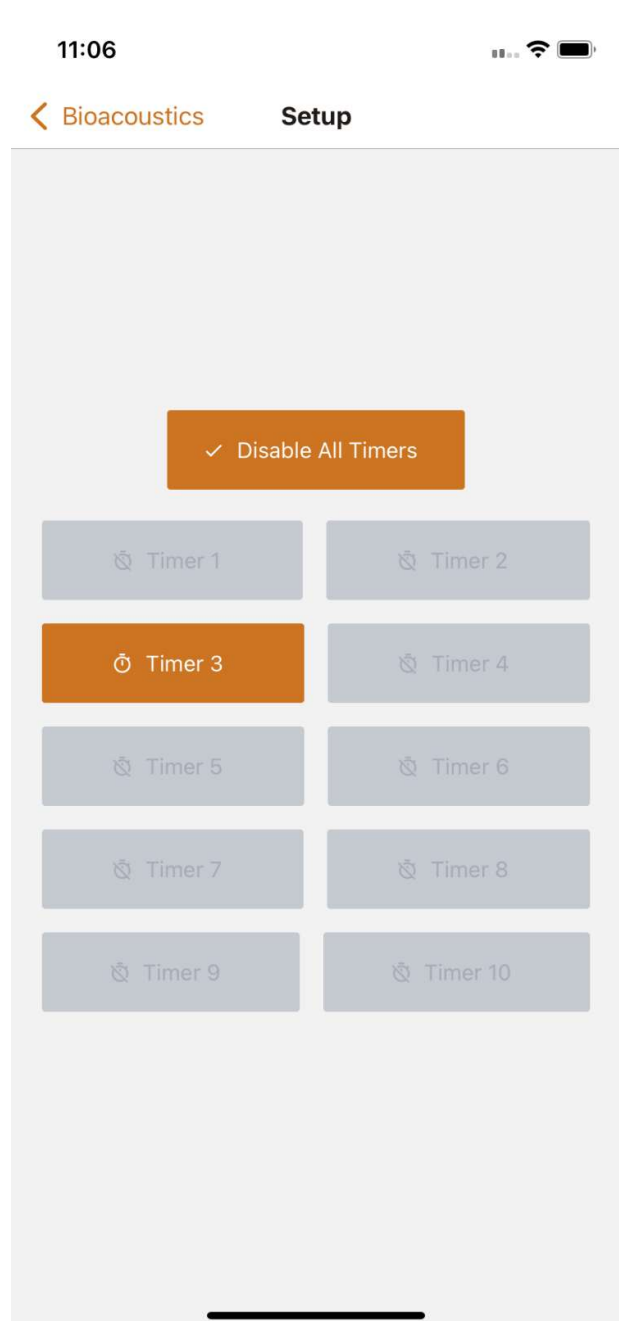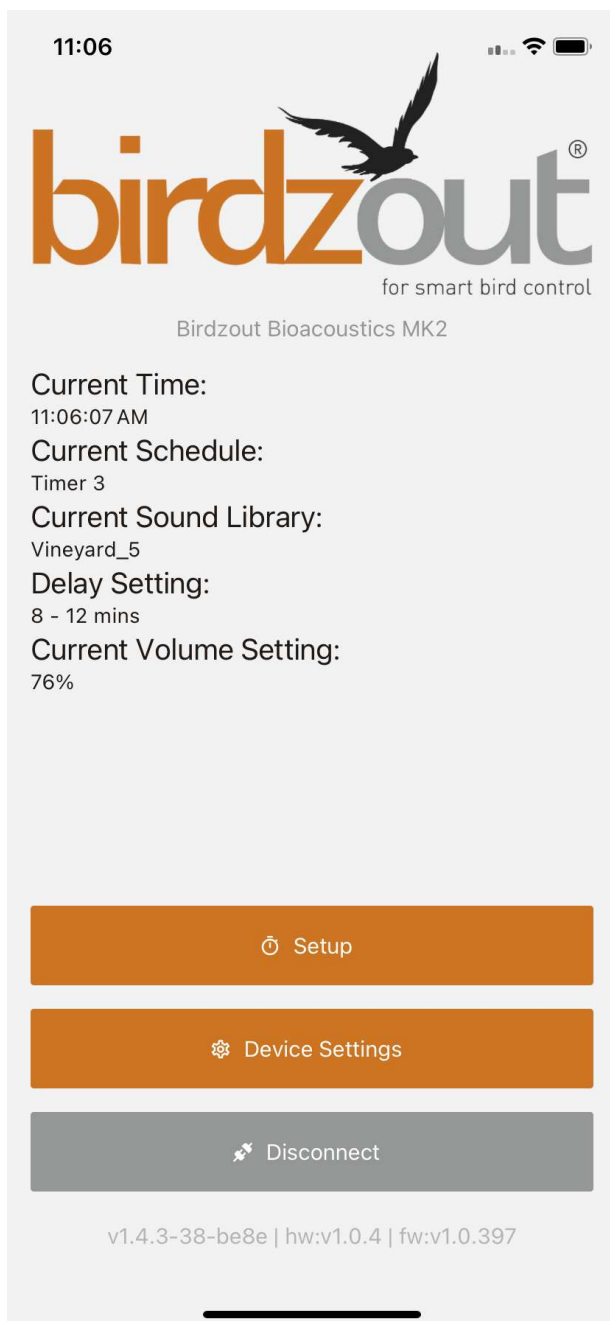

#### 4.3.1. Timer On/Off Setting

Press the timer that is required to be set.

To make the timer active, press the “timer active button to get the tick to appear

Set the on time and off time, setting hours and minutes.

Select the days of the week the timer is to be active for.

Set the volume using the slider. (set in increments of 2%)

11:06

< Setup Timer Settings (Timer 3)

Timer Active ✓

On Time  
06:00 AM

Off Time  
07:00 PM

Days Active

✓ Monday

✓ Tuesday

✓ Wednesday

✓ Thursday

✓ Friday

✓ Saturday

✓ Sunday

Speaker Volume: 76%

Days between Library Changes: 1

Sound Libraries

Vineyard\_5 - ID:0

Harassment\_Only\_All\_Birds - ID:1

Vineyard\_1 - ID:2

Vineyard\_2 - ID:3

Vineyard\_3 - ID:4

Vineyard\_4 - ID:5

Delay

 
8 - 12 mins

Save Timer

#### 4.3.2. Sound Library Selection

Press the sound library section to see the list of available sound libraries, and to select the libraries for that timer. Press the tick box beside the sound library name to select.

Note that to see the individual sound file names within each sound library, press the arrow on the right to expand the list. Press the up arrow to collapse the list again.

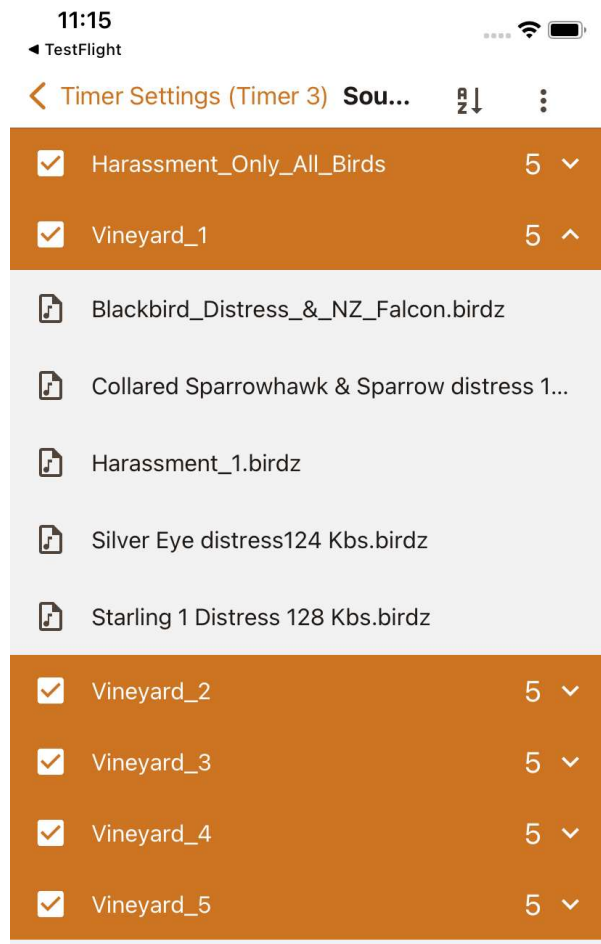

#### 4.3.3. Delay Settings

The unit will play through the sounds in the sound library in a random order, then there will be a delay interval where no sounds are played. Press the delay section to choose the delay interval.

#### 4.3.4. Sound Library Settings

If more than 1 sound library is selected, adjust the “Days between library changes interval” slider to select how often the sound libraries will change onto the next selection.

## 5. LED Status Indicators

The red and green LED indicators either side of the antenna advise the status of the unit, detailed below:

- No colour on either LED – unit is not receiving power or battery voltage is low
- • Red and green flashing simultaneously – unit is in startup mode
- • • Slow green flashing – unit is in standby mode (no timers set or in a timer off period)
- Solid green – unit is playing deterrent sounds
- • • Fast green flashing – unit is in a delay period
- Solid red – Bluetooth connected
- • • Flashing red – error.

## 6. Specifications

### Operating Specifications:

Maximum Volume: 125 decibels at 1m.  
Operating Voltage: 12V DC  
Max Power Consumption: 2.5A at 12V  
Ingress Protection Rating: IP55  
Operating Temperature: -10 to 50 degrees Celsius.

### Dimensions:

LxWxH 350x350x250mm (including antenna)  
Weight: 5kg

### Compatible Devices:

Android: Android 6.0 or later  
iOS: iOS 13.0 or later  
Bluetooth: version 4.0 or higher

### App QR Codes:



Android



iOS

Supplied By:



birdcontrol  
AUSTRALIA | COMMERCIAL  
RESIDENTIAL MARINE®

## Contact info

PO Box 1790



Rozelle, New South Wales,  
Australia 2039



[info@birdcontrolaustralia.com.au](mailto:info@birdcontrolaustralia.com.au)



+61 451 284 632